



## SEARCHING FOR ESCAPE BREATHING APPARATUS?

THE OCENCO EBA 6.5 IS THE WORLD STANDARD

Since introducing the EBA 6.5, Ocenco Inc. has sold more emergency escape breathing apparatus to the worlds mining industry than all other manufacturers combined.



*The EBA 6.5 can be donned in 15 seconds or less.*

Why? Because the EBA's oxygen supply is long-lasting. The EBA 6.5 supplies the wearer more than 90 minutes of oxygen during a typical mine escape — up to 8 eight hours of oxygen at rest — a performance that exceeds all mining standards. (Oxygen delivery ranges from 1.5 l/min constant flow up to 100 l/min demand flow.)

The EBA 6.5 uses compressed oxygen as a source rather than generating oxygen from chemicals. The oxygen content indicated on the gauge is always visible for inspection through the clear, tamper-proof sealed case.

The apparatus can be refurbished for a service life of up to 15 years and provides a lower cost per year of service than any other unit.

The EBA 6.5 is a highly reliable breathing apparatus tested in life-threatening situations throughout the world. Hundreds of thousands are currently in service in mines in the United States, Australia, Poland, Canada, Chile and South Africa.

### THE EBA 6.5 IS:

**Quick to don** – can be put on and be fully operational in 15 seconds or less.

**Easy to operate** – turning the valve on activates the system; turning off permits conservation of oxygen.

**Long-lasting** – over 90 minutes oxygen in demand mode; up to eight hours in conservation mode.

**Light-weight** – donned weight 8.0 lbs (4.17 kg). With composite cylinder only 7.0 lbs (3.17 kg).

**Compact** – at 8.5" x 11.8" x 4.5" (21.6 cm x 30 cm x 11.4 cm), it stores easily and is easy to retrieve.

**Easy to inspect** – simple visual inspection confirms that unit is ready to use.




*The EBA 6.5, in its clear, polycarbonate case, is durable and easy to inspect.*

# EBA 6.5 PHYSICAL CHARACTERISTICS AND PERFORMANCE DATA

Approvals	Approval Numbers	Approval Duration
MSHA/NIOSH	TC-13F-104	60 minutes
Republic of South Africa (applicable standard)	AZ 2009/ 02 SANS 53794: 2007	90 minutes
Australia (applicable standard)	SMKH21694 AS/NZS 1716:2003	90 minutes
CE	CE 0194/EN 13794:2002	90 minutes
China	MLA080028	100 minutes
Performance duration	110 minutes	
Rest duration	8 hours	
Time to don/activate	15 seconds, or less	
Total weight	9.2 lbs (4.17 kg) Aluminum cylinder 8.2 lbs (3.72 kg) Composite cylinder	
Donned weight	8.0 lbs (3.63 kg) Aluminum cylinder 7.0 lbs (3.17 kg) Composite cylinder	
Dimensions	8.5" x 11.8" x 4.5" (21.6 cm x 30 cm x 11.4 cm)	
Storage temperature range	10° F to 140° F (-12° C to 60° C)	
Liters of oxygen available	157	
Repair/refurbish after use	Yes	
NIOSH service life	15 Years	
Oxygen delivery system	Compressed oxygen On/off valve Constant flow/demand regulated	
Cylinder pressure	3000 psi (207 Bars)	
CO <sub>2</sub> Scrubbing material	Lithium hydroxide	
Inspection	Visual	

## EBA 6.5 SELF-CONTAINED SELF RESCUER

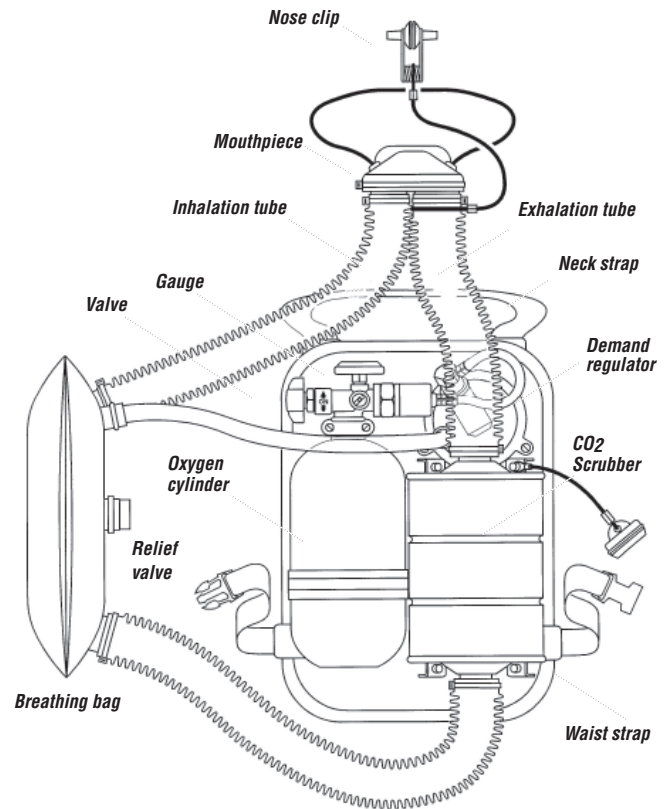

### THE EBA 6.5 CIRCUIT

Oxygen from the breathing bag is inhaled through the inhalation tube and the mouthpiece. Breath is exhaled through the mouthpiece into the CO<sub>2</sub> scrubber. Scrubbed breath enters the breathing bag and is mixed with oxygen from the oxygen cylinder via the demand regulator.



LakeView Corporate Park  
10225 82nd Avenue  
Pleasant Prairie, WI 53158-5801  
U. S. A.

Phone: (262) 947-9000  
Fax: (262) 947-9020  
www.ocenco.com

## DESIGNING SAFE SOLUTIONS FOR HAZARDOUS ENVIRONMENTS